

***TELIKOU* Intercom System**

**BK-1200 Wireless Belt Pack**

**Instruction Manual**

© **TELIKOU Systems**


All Rights Reserved

## I. Introduction

Thank you for choosing TELIKOU intercom product. We recommend you read through this manual to better understand the functions of BK-1200 digital wireless belt pack.

BK-1200 digital wireless belt pack running on 2.4G free of license frequency.

## II. Specification

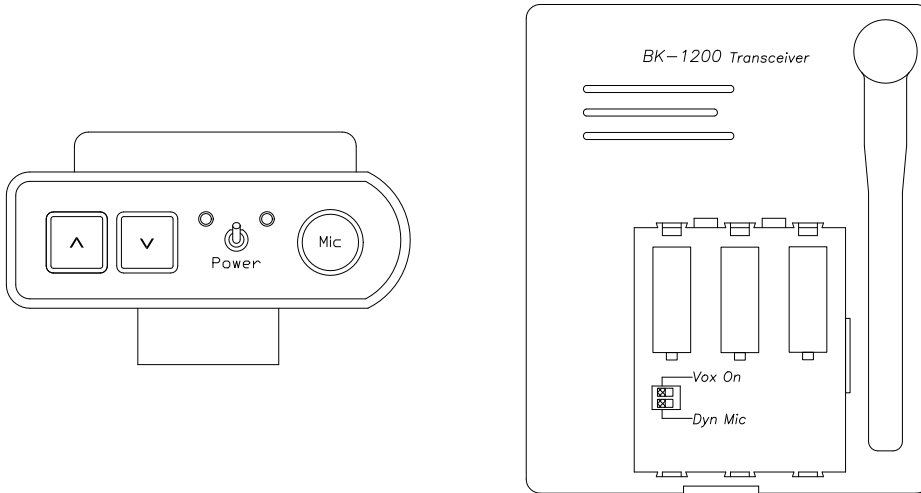

MIC	Microphone Control Button
▲/▼	Volume Control
POWER	Power Switch
Low Battery & Code LED	Dual Color LED
MIC LED	Microphone status indicator
Vox	Null
Dyn	Microphone type selector
	On: Dynamic
	Off: Electret
Headset Connector	Pin1, Pin2: Microphone;
	Pin3, Pin4: Earphone;
	Pin5: Ground

## III. Code Matching

### Belt Pack Working Group

BK-1200 belt pack can work alone without main station.

1. Select one belt pack as main station.
2. Hold 'VOL+' button then turn on the power for this belt pack.
3. When Power LED flashes slowly. Release the 'VOL+' button. This belt pack has set as main station.
4. Select another belt pack.
5. Hold 'VOL-' button then turn on the belt pack power. When power LED flashes slow, release the 'VOL-' button.
6. System does the code matching automatically. Power LED flashes fast, then light constantly means code matching has finished.
7. Repeat step 3 and 4 for rest belt pack.
8. Restart all the belt pack.

**Note: After finishing Code Matching, Belt Pack have to be restart.**

## **VI. Technical Specification**

### **Working Frequency:**

2.4G (433M / 868M / 915MHz are optional)

### **MAX Transmit Power:**

20dBm

### **Belt Pack Battery:**

3 x AA size battery

### **Belt Pack Working Current:**

TX: max 130mA RX: max 50mA

### **DIMENSION:**

180mm x 150mm x 70mm

### **WEIGHT:**

0.15kg